Plasma lons **Plasma Air Disinfection Purifier** PS-400T2

(E 🛵 🗪 🚳 🔘


Please read the instructions before use

[Technical Specification]

Model	PS-400T2	Power	30 W	
Voltage	120V AC / 240V AC	Air volume	400m³/h	
Area	40 m²	Weight	3.85Kg	
Noise	≤50dB	Ion tube	1 (Standard)	
Size	240*240*820mm	Ion tube size	70mm(2.8 inch)	
Filter type	High efficiency filter	Ion tube life	17000 Hour	


13

2 Remote Control

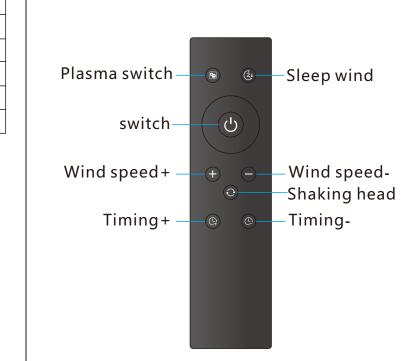

Product introduction

This product is intelligent purification fan, natural wind reasonable gear transformation let you recall the summer under the cool wind, gentle sleep wind to help you sleep at ease, more intimate design concept to bring you a more comfortable human-machine

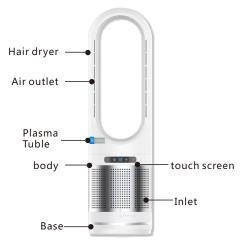

Basic parameters

Product Name: Plasma air disinfection fan				
Rating Voltage: 120V AC / 240V AC	Rated Power: 30\			
Rated Frequency: 50/60Hz	Timing Time: 1~8			
Application area: 40 m²	Rotate Angle: 80°			

(1) When the host is in standby state, press the power button to start operation; When the host is in the running state, press the power button to stop the operation and enter the

standby state. 2) Press the natural wind button on the remote control, the display shows FF. Press again to exit natural wind. (Press the air speed key to exit the current mode also) ③ Press the sleep wind button on the remote control, the display shows LL. Press it again

(4) Press the "Wind Speed +" button on the remote control to increase the air volume. Press the "Wind Speed —" button on the remote control to reduce the air volume.

to exit Sleep Wind. (Press the air speed key to exit the current mode also)

(5) Press the shaking head button on the remote control to turn on the left and right shaking heads. Shake the head at 80° and press it again to exit the shaking operation.

(6) Press the "Timing +" button on the remote control to increase the timing time. Press the "Timing-" button on the remote control to decrease the timing time. Can realize 1 to 8 hours timer function. After the timer function is set, other functions can still be used normally; after the power is turned off, the timer setting will also be canceled; the machine will stop running when the timer expires.

3

(Please keep it properly)

Warranty Card

Purchase Contact Time Number	Product Name		Product Number	
Customer Name/company	Na Customer	me/company		
information contact address	nformation	ntact address		

• It is strictly prohibited to use the machine facing or under the power socket. It is strictly prohibited to share the socket with other high-power electrical appliances; it is

strictly forbidden to move the body by pulling the power cord directly;

 Because the machine is covered or improperly placed, it may cause a fire hazard. Do not use this product with a programmer, timer, or any other device with automatic

• When using this product, the power cord should be placed behind the body. Placing it in front of the body will cause it to overheat and damage it, and even cause a safety accident;

please use this appliance under adult supervision to prevent accidents;

• If the product fails, please tum off the power immediately and unplug the power cord. It must be repaired by the manufacturer's maintenance department or a similar department.

Children, elderly people or patients who have lost the ability to take care of themselves.

 Before use, check the power cord and plug for damage. If the power cord is damaged, in order to avoid danger, the user must not disassemble or replace the power cord by himself. It must be replaced by the manufacturers maintenance department or similar department

• When using this product, in order to avoid burning, please do not let the exposed skin

directly contact the surface of the air outlet;

• Suitable for use in dry environment only. Do not use this product around a bathtub,

sprinkler or swimming pool: • If there is looseness between the plug and the socket or the plug becomes hot, the socket

may need to be replaced. Consult a qualified electrician to replace the outlet. This product must be equipped with a 3C-certified fixed socket that is consistent with the rated working current of the plug. The use of mobile multi-purpose sockets is strictly

12

10 Important safety instructions



o observe the following requirements: caveat! Please

WARNING

 Non-full-time personnel or unauthorized repair personnel shall not repair or modify the machine by themselves. Before plugging in the power, please check whether the rated voltage marked

on this product matches the voltage in your home $\!\!\!\! \circ$ • When the machine is in normal use or idle, it should be more than 1.5 meters

away from the fire source and fire, and avoid direct sunlight. • It is forbidden to use near flammable, explosive, heat deformable, discolored, or

deteriorated objects, and it is forbidden to use in places with severe dust.

• It is forbidden to use the place where there are easy to drop hanging objects, and it is forbidden to use it in the place which is easy to be impacted or placed in unstable. Do not use the method of plugging (unplugging) the power cord to replace the power

• It is forbidden to use this machine as heat preservation and heating equipment for animals and plants.

To avoid overheating, it is forbidden to cover the heater.

• It is strictly forbidden to insert thin metal wires or other foreign objects into any hole in the machine, so as to avoid electric shock accidents.

 \bullet Do not use this product if it has been dropped or has obvious signs of damage $_{\circ}$

11

Battery installation method and 8 troubleshooting analysis

Back of remote

— Cover

Before using the remote Insert the battery into the remote control befor

Battery installation method

① Open the battery cover of the remote control ② Load two new AAA sections (Seventh) dry

Note: Do not charge this battery. Keep attention if swallowed.

Note: Please insert the battery correctly. Pools are subject to local ordinances or regulations.

Mainframe and remote control failure analysis & troubleshooting

Cause Analysis
Whether the plug is loosely inserted into the socket
Whether the socket power switch is turned on
Whether the remote control timing setting is turned
Is the battery dead?
Is the battery installed correctly?
Is the remote control pointed at the infrared receiver win
e problem according to the above methods, please contact mediately. Do not disassemble, repair and install by yours

3 Remote control operation introduction



Switch

■ Mode

corresponding indicator lights up.

Rotating operation

■ SPEED+Z SPEED-

shaking the head.

• The following phenomena may occur during operation. This is due to the frequency overlap of the remote control. There is no quality problem in the product itself, lb avoid misoperation, please keep the remote control away from other appliances:

• When using remote control of other appliances, this intelligent purification fan may

• When using the remote control of this smart purification fan, other appliances may

The power on / off button on the remote control or the

off the power. If not used for a long time, please unplug it.

After the plug is inserted into the socket, tum on the power switch, the

purification fan starts running; long press the host power button for 2

seconds, the buzzer prompts two Sound, after letting go, stop running.

When the host is in the running state: Press Mode repeatedly to switch

between wind speed, time, natural wind, and sleep wind, and the

When the host is in running state: press the shaking head button, the

shaking head button again, the buzzer will prompt a beep, and stop

buzzer will prompt a beep, and shake the head to tum on; press the


When the wind speed and time indicators are on, press the upshift

display the corresponding wind speed gear or timing time.


and downshift buttons to adjust the wind speed or timing time. And

the switch button, the buzzer prompts a beep, and the intelligent

power indicator light is on, the machine enters the standby state, press

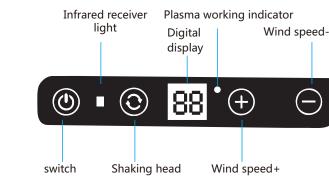

4 Host operation introduction

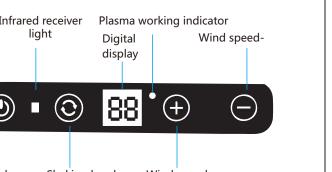

■ When performing maintenance, be sure to unplug the power cord first.

9 Cleaning and maintenance



During maintenance, please do not touch or spray water to wipe the surface of the smart purification fan, it may cause water into the machine and damage it. Please don't use banana water, gasoline, alcohol, bleach or netal objects to wipe the smart purification fan. It may cause discoloration of the surface or scratch the

Object surface Please gently wipe the surface of the smart

ourification fan with a dry soft cloth: if the surface is dirty, you can wipe it with a soft cloth after diluting with a neutral detergent; wipe it with a dry soft cloth and

Air inlet and outlet

Use a soft brush or a vacuum cleaner to clean the dust at the air inlet and air outlet. Too much dust accumulation may affect the use effect. Please clean it in time when there is less dust.

Remote control Wipe the surface of the remote control lightly with a soft dry cloth. To avoid battery drain if not in use for a

ong time, remove the battery from the remote control

Power plug Clean the power plug with a soft, dry cloth.

How to keep

Fanless cooling and heating fans can be put in plastic bags after maintenance; please avoid places subject to vibration and appliances with cooling/heating functions: please avoid placing them in direct high temperature and humidity; local.

The effective warranty period of this product is twelve months from the date of purchase. During the warranty period, you can get the warranty service with the purchase record to the point of purchase.

Products outside the warranty period can get paid warranty service based on the purchase record to the point of purchase. If you encounter inconvenience during the process of contacting the point of purchase.

This product's warranty does not apply to:

6 Warranty description

1. Products not produced by our company:

voltage and current, etc.)

2. Products not sold by our company;

3. Product failure or damage caused by force majeure such as natural disasters (such as earthquakes, fires, etc.):

4. Product failure or damage caused by human reasons (unauthorized disassembly, modification of any component, incorrect installation, storage and use according to the instructions, input of inappropriate

5. The user alters and destroys the barcode of the product by himself; 6. The equipment and components have exceeded the warranty period.

7 Warranty description

overturning and causing damage or malfunction. Bathroom, kitchen).

• During use, avoid the air inlet being blocked. Please use it away from the place where curtains are installed, to avoid the object blocking the air inlet and the machine not working

effect will be reduced.

unstable place. If there is a slope, a soft surface can prevent the smart purification fan from

• Do not place objects within 1 meter in front of the air outlet, otherwise the blowing