



【Installation Notes】

There are two ways of installation: perforation installation and no hole installation. Perforation installation is suitable for the walls can make screw holes, and no hole installation for smooth metal walls. (Like in the elevator, most of them belong to the non-punching installation mode, this is be selected by the user according to the installation environment)


(1)No punchingsteps:




1. Mounting tape




2. Stick it on the back of the product.




3. Paste 2 pieces of tape on the back



4. Tear off the release papertape, level Aim at the wall and press firmly.




5. Plug in the power adapter and plug Connect to DC12V power input.




6. The work indicator lights up, disinfection The machine works normally.


(2)Punching InstallationSteps::




1. Make sure to punch holes on the wall before installation Distance and mark the position of the punch (Anyways or vertically).




2. Use a drill to make holes at the marked position. The distance between the two holes is 16mm.




3. Drive the expansion rubber plug into the punching position to fix the screws.



4. Remove the rear cover by hand, you can see the upper and lower mounting screwholes.



5. Hang the sterilizer directly on the back cover and fix it.



6. Plug in the power adapter and connect the plug to the DC12V power input.

Warranty Card

(Please keep it properly)

Product Name		Product Number	
Purchase Time		Contact Number	
Customer information	Name/company		
	contact address		
Sales company stamp			

Plasma Ions

Plasma Air Disinfection Purifier

PS-400T1



Please read the instructions before use

【Precautions】

There are electronic devices installed inside, do not open the case to avoid the risk of electric shock. Please read this [user manual] carefully before using the machine and follow the below points of operation base on the manual. Otherwise It may cause damage to product, or even cause injury to yourself or others at varying degrees.

- This machine is designed for only indoor general using. Do not place it open-air or high temperature place.
- Before operating the machine, make sure the power cord is firmly plugged into the power outlet, and place the power cord in a safe position. Do not touch, install or unplug the power cord with wet hands to avoid electric shock accidents.
- Before unplugging the power cord, please turn off the machine power in the correct procedure, otherwise it may cause damage to the machine.

If don't use the machine for a long time, please unplug the power supply.

Before operation, please check whether the air inlet and outlet positions of the machine are blocked.

- Do not put debris at the air inlet or outlet, because there is the fan installed inside with high-speed rotation, it may caused injured if touch it.
- In order to ensure the best performance of the machine, do not place any obstacles within 1 meter nearby of the air outlet position and air introduction position.
- The machine has precision components built inside. Don't open the case by yourself to avoid damage to the machine parts and may happen dangerous.
- Do not dismantle the front wind panel or the chassis during machine is operating to avoid dangerous.
- Pay attention to ventilation when using it together with fuel appliances. Please do not use machine in the kitchen.
- Before cleaning the chassis of the machine, make sure turn off the power and unplug it of the machine. Only use cloth with a little clean water and clean it softly, don't use volatile cleaners.
- Forbidding to place and using in the bathroom, otherwise it may cause electric shock.

【Use and characteristics】

- Shell is Aluminum alloy.
- Plasma ions generator play a long-lasting and active positive and negative ion purification effect.
- This product can be used for a long-term. (Suggest clean the ion tube about 12 months later, clean or change the filter)
- It is widely used in elevators in various places such as hospitals, schools, office buildings, residential buildings, shopping malls, and so on.

【 Maintenance notice 】

1. Please read this manual carefully before use.
2. Free services can be provided with warranty card and invoice, welcome to contact us if you need technical support.
3. Customers can get 1 year warranty service from us with product related invoice and documents.
4. Please keep the warranty card properly so that the warranty can be obtained when the product needs repair.
5. The company is not responsible for the following repair services beyond the product, but we can still provide you with paid services.



- Products due to improper use or storage.
- Products without warranty card or other valid documents.
- Products due to unstable power supply voltage or beyond the normal voltage range or power supply and installation does not meet the electrical installation requirements.
- Promotional products.
- Products damaged caused by irresistible natural disasters.
- Products beyond maintenance period, damaged due to not follow the rules and methods of application.

【 Technical specification 】

Model	PS-400T1	Power	6 W
Voltage	12V DC	Air volume	15m ³ /h
Application area	5~15m ²	Weight	300g
Noise	≤30 dB	Ion tube quantity	1 (Standard)
Size	195*100*60mm	Ion tube size	60mm(3 inch)
Shell material	Aluminum alloy	Ion tube life	17000 hours

【 Constituent unit 】

(1) Product overview:

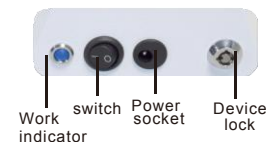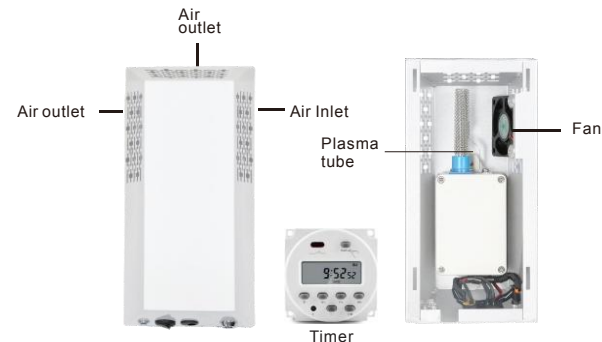

(2) Product Size:

